
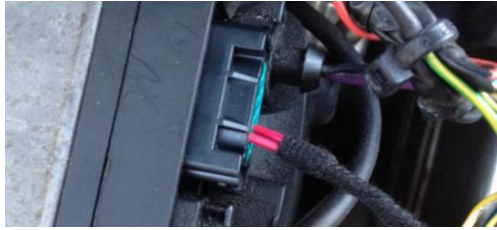
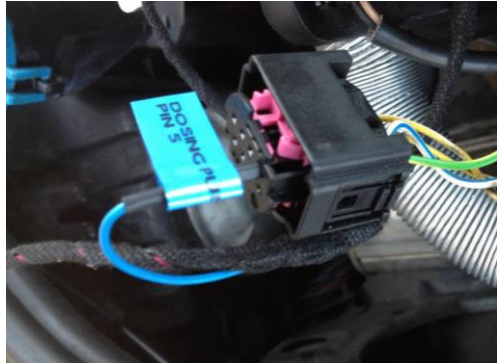


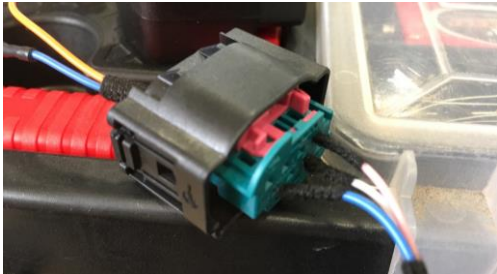


<p>Remove FBH plug and replace with plug from FBH diagnostic loom</p>	
<p>With the pin terminal on the blue wire: <b>D3/D4/RRS:</b> Insert into removed 8-pin plug, position 5 <b>L322:</b> insert into removed 6-pin plug, position 6</p>	
<p>With the pin terminals on pink and white wires: <b>2012MY onwards D4/RRS:</b> insert pink terminal into position 4, white terminal into position 7 <b>Other cars:</b> not used, make sure these pins cannot touch each other or other metal parts</p>	
<p>Insert the OBD plug into your OBD2 K-line adapter</p>	
<p>Remove battery cover and connect red crocodile clip to <b>positive</b> battery lead (<b>red</b> cables going to it, towards FRONT of battery box on D3/D4/RRS)</p>	
<p>Connect black crocodile clip to <b>negative</b> battery lead (<b>black</b> cables going to it, towards REAR of battery box on D3/D4/RRS)</p>	
<p><b>Note: when removing connections, do NOT pull the wires, use the plugs</b></p>	