

Remove FBH plug and replace with plug from FBH diagnostic loom



With the pin terminal on the blue wire:

**TTV:** Insert into removed 8-pin plug, position 5

**TTC:** insert into removed 6-pin plug, position 6



With the pin terminals on pink/yellow and white wires:

**2012MY onwards D4/RRS:** insert pink or yellow terminal into position 4, white terminal into position 7


**Other cars:** not used, make sure these pins cannot touch each other or other metal parts



Insert the OBD plug into your OBD2 USB adapter



Remove battery cover and connect red crocodile clip to **positive** battery lead (**red** cables going to it, towards **FRONT** of battery box on D3/D4/RRS)

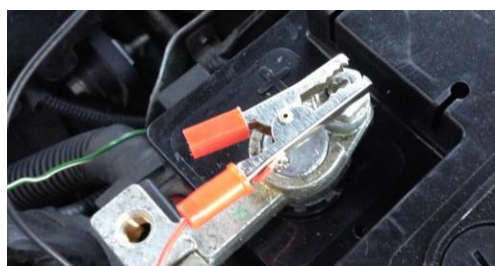

Connect black crocodile clip to **negative** battery lead (**black** cables going to it, towards **REAR** of battery box on D3/D4/RRS)



**Note: when removing connections, do NOT pull the wires, use the plugs**